Checking Function Photocell reflector Doorcontrol
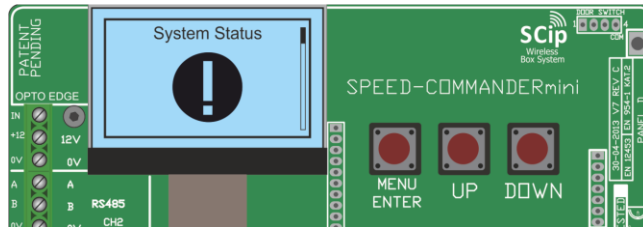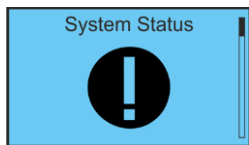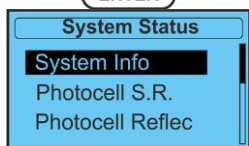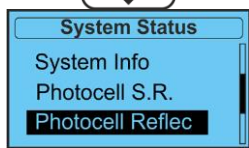
MENU ENTER ▶
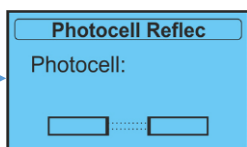
System Status
!

MENU ENTER **1x**

System Status
- **System Info**
- Photocell S.R.
- Photocell Reflec

DOWN **2x**

System Status
- System Info
- Photocell S.R.
- **Photocell Reflec**

MENU ENTER **1x**

Photocell Reflec
Photocell:

Photocell Reflec = Photocell with Reflector

☐·······☐ = Ok

Photocell Reflec
Photocell:
ACTIVE
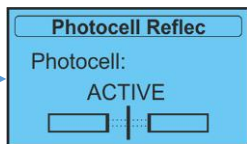
Photocell Reflec = Photocell with Reflector

Active = Something is blocking the photocell
Or the signal is missaligned
Or the photocell is damaged

MENU ENTER Hold > 5 Sec
(to get back to the idle screen)